#### TRIP INSPECTION

### Appendix

#### Schedule 1 - Truck, Tractor and Trailer

 $\textbf{Application:} \ \ \text{This schedule applies to trucks, tractors and trailers or combinations of them exceeding a registered gross vehicle weight of 11~794 kilograms.$ 

Inspection Item	Defect	Major Defect
Air brake system	<ul> <li>Audible air leak;</li> <li>Slow air pressure build-up rate.</li> </ul>	<ul> <li>Pushrod stroke of any brake exceeds the adjustment limit;</li> <li>Air loss rate exceeds the prescribed limit;</li> <li>Inoperative towing vehicle (tractor) protection system;</li> <li>Low air warning system fails or system is activated;</li> <li>Inoperative service, parking or emergency brake.</li> </ul>
Cab	• Occupant compartment door fails to open.	Any cab or sleeper door fails to close securely.
Cargo securement	• Insecure or improper load covering (e.g. wrong type or flapping in the wind).	Insecure cargo;     Absence, failure, malfunction or deterioration of required cargo securement device or load covering.
Coupling devices	Coupler or mounting has loose or missing fastener.	<ul> <li>Coupler is insecure or movement exceeds prescribed limit;</li> <li>Coupling or locking mechanism is damaged or fails to lock;</li> <li>Defective, incorrect or missing safety chain or cable.</li> </ul>
Dangerous goods		Dangerous goods requirements set out in The     Dangerous Goods Transportation Act not met
Driver controls	Accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly.	
Driver seat	• Seat is damaged or fails to remain in set position.	Seatbelt or tether belt is insecure, missing or malfunctions.
Electric brake system	Loose or insecure wiring or electrical connection.	<ul> <li>Inoperative breakaway device;</li> <li>Inoperative brake.</li> </ul>
Emergency equipment and safety devices	• Emergency equipment is missing, damaged or defective.	

# H-3.01 REG 11

# TRIP INSPECTION

Inspection Item	Defect	Major Defect
Exhaust system	• Exhaust leak.	Leak that causes exhaust gas to enter the occupant compartment.
Frame and cargo body	Damaged frame or cargo body.	Visibly shifted, cracked, collapsing or sagging frame member.
Fuel system	Missing fuel tank cap.	<ul><li>Insecure fuel tank;</li><li>Dripping fuel leak.</li></ul>
General		• Serious damage or deterioration that is noticeable and may affect the vehicle's safe operation.
Glass and mirrors	<ul> <li>Required mirror or window glass fails to provide the required view to the driver as a result of being cracked, broken or damaged, missing or maladjusted;</li> <li>Required mirror or glass has broken or damaged attachments onto vehicle body.</li> </ul>	
Heater or defroster	Control or system failure.	Defroster fails to provide an unobstructed view through the windshield.
Horn	Vehicle has no operative horn.	
Hydraulic brake system	Brake fluid level is below indicated minimum level.	<ul> <li>Parking brake is inoperative;</li> <li>Brake boost or power assist is inoperative;</li> <li>Brake fluid leak;</li> <li>Brake pedal fade or insufficient brake pedal reserve;</li> <li>Activated (other than ABS) warning device;</li> <li>Brake fluid reservoir is less than 1/4 full.</li> </ul>
Lamps and reflectors	<ul> <li>Required lamp does not function as intended;</li> <li>Required reflector is missing or partially missing.</li> </ul>	<ul> <li>When lamps are required:</li> <li>Failure of both low-beam headlamps;</li> <li>Failure of both rearmost tail lamps.</li> <li>At all times:</li> <li>Failure of one rearmost turn-indicator lamp;</li> <li>Failure of both rearmost brake lamps.</li> </ul>
Steering	• Steering wheel lash (free-play) is greater than normal.	Steering wheel is insecure, or does not respond normally; Steering wheel lash (free-play) exceeds the required limit.

### TRIP INSPECTION

Inspection Item	Defect	Major Defect
Suspension system	<ul> <li>Air leak in air suspension system;</li> <li>Broken spring leaf;</li> <li>Suspension fastener is loose, missing or broken.</li> </ul>	<ul> <li>Patched, cut, bruised, cracked to braid, mounted insecurely or deflated air bag;</li> <li>Cracked or broken main spring leaf or more than one broken spring leaf;</li> <li>Part of spring leaf or suspension is missing, shifted out of place or in contact with another vehicle component;</li> <li>Loose U-bolt.</li> </ul>
Tires	<ul> <li>Damaged tread or sidewall of tire;</li> <li>Tire leaking (if leak can be felt or heard, the tire is to be treated as flat).</li> </ul>	<ul> <li>Flat tire;</li> <li>Tire tread depth is less than the wear limit;</li> <li>Tire is in contact with another tire or any vehicle component other than mud-flap;</li> <li>Tire is marked "Not for highway use";</li> <li>Tire has exposed cords in the tread or outer side wall area.</li> </ul>
Wheels, hubs and fasteners	<ul> <li>Hub oil below minium level (When fitted with sight glass);</li> <li>Leaking wheel seal.</li> </ul>	<ul> <li>Wheel has loose, missing, or ineffective fastener;</li> <li>Damaged, cracked or broken wheel, rim or attaching part;</li> <li>Evidence of imminent wheel, hub or bearing failure.</li> </ul>
Windshield wiper or washer	<ul> <li>Control or system malfunction;</li> <li>Wiper blade damaged, missing or fails to adequately clear driver's field of vision.</li> </ul>	<ul> <li>When necessary for prevailing weather conditions:</li> <li>• Wiper or washer fails to adequately clear driver's field of vision in area swept by driver's-side wiper.</li> </ul>